

Gebrauchsanleitung

Gewerbe-Kühlschrank

Seite 2

D

Operating instructions

Commercial refrigerator

Page 6

GB

Gebruiksaanwijzing

Bedrijfskoelkast

Pagina 10

NL

Mode d'emploi

Armoire positive à usage professionnel

Page 14

F

Istruzione d'uso

Frigorifero industriale

Pagina 18

I

Instrucciones de manejo

Frigorífico industrial

Página 22


E

Manual de utilização

Frigorífico industrial

Página 26

 P

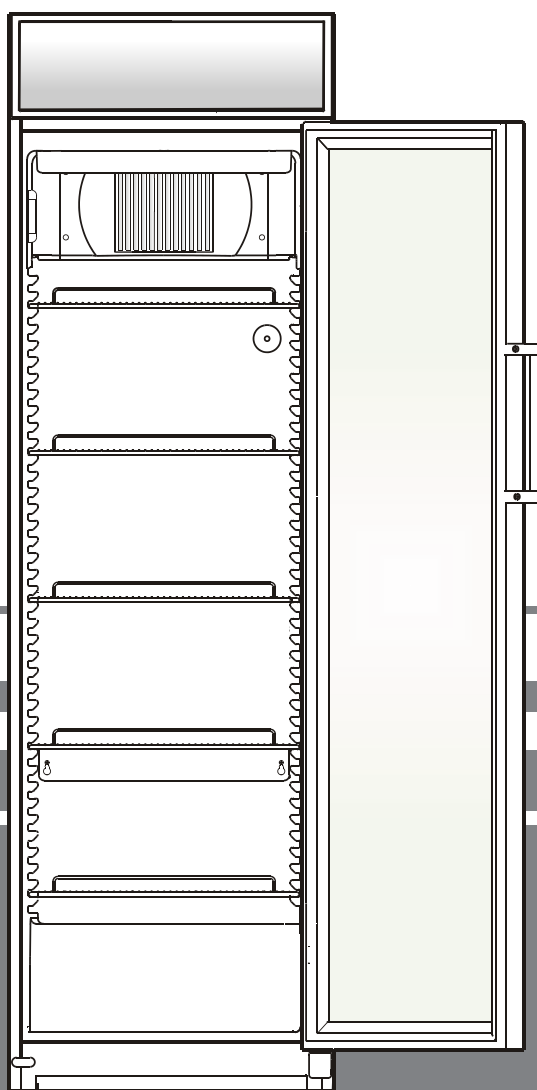

7084 733-01

BCDv 4302/4312/4313

LIEBHERR

Disposal notes

- **Keep packaging materials away from children - polythene sheets and bags can cause suffocation!**

- Please return the packaging to an official collection point.

Your old appliance: This contains some reusable materials and should be disposed of properly - not simply with unsorted household refuse.

- Discarded appliances should be disabled: Remove the plug, cut through the connection cable and render the catch unusable so that children cannot become trapped inside.
- Ensure that the refrigerant circuit is not damaged when the appliance that is no longer needed is taken away for disposal.
- Details of the refrigerant can be found on the type plate.
- Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



Range of appliance use

The appliance is suited only for cooling food. In the case of commercial food cooling, the pertinent statutory regulations have to be observed.

The appliance is not suited for storing and cooling pharmaceuticals, blood plasma, laboratory preparations or similar substances and products subject to the Medical Devices Directive 2007/47/EC.

Any misuse of the appliance may result in damage to or spoilage of the stored goods.

Furthermore, the appliance is unsuited for use in areas exposed to an explosion hazard.

Climate rating

The appliance is set to operate within specific ambient temperature limits according to its climate rating. These temperature limits should not be exceeded. The correct climate rating for your appliance is indicated on the type plate.

Climate rating	Ambient temperature
SN (4)	+10°C to +32°C
N (4)	+16°C to +32°C
ST (5)	+16°C to +38°C
T (5)	+16°C to +43°C

Dimensions

 
Height: 2000 mm
Width: 600 mm
Depth: 670 mm

Safety instructions and warnings

- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- Do not consume food which has been stored for too long, as it could cause food poisoning.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane etc. in the appliance. Electrical components might cause leaking gas to ignite. You may identify such sprays by the printed contents or a flame symbol.
- **WARNING** : Do not damage the refrigerant circuit.
- **WARNING** : Do not use electrical appliances inside the appliance.
- If you have a lockable appliance, do not keep the key near the appliance or within reach of children.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- Special-purpose lamps (incandescent lamps, LEDs, fluorescent tubes) in the appliance serve to illuminate the appliance interior and are not suited for room illumination.
- Do not connect the appliance to the supply with other equipment using an extension cable. This can cause the extension socket to overheat.

Setting up

- Avoid positioning the appliance in direct sunlight or near cookers, radiators and similar sources of heat.
- The floor on which the appliance stands should be horizontal and level. Compensate for uneven floors with the adjustable feet.
- There must be a gap of at least 30 cm between the upper edge of the appliance and the ceiling. Always ensure that there is good ventilation and that the outward flowing air is able to escape.
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m³ per 8g of R600a (R290) refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.
- Always install the appliance directly against the wall.

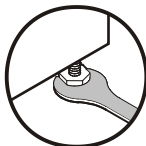

Connecting to the mains

Power supply (AC) and voltage at the operating point must comply with the details on the type plate. The socket must be fused with a 10A fuse or higher, it must be away from the rear of the appliance and must be easily accessible.

 
Connect the appliance with a properly earthed fused plug and socket only.

Switching the appliance on and off

You are recommended to clean the appliance before switching it on for the first time (see **Cleaning**).

To switch the appliance on: Connect the appliance to the mains - the appliance is switched on.

To switch the appliance off: Pull out the mains plug or set the temperature control to T “•”.

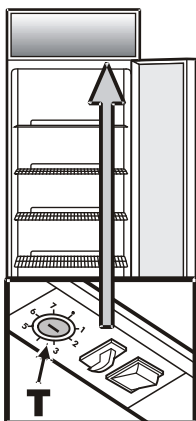


Setting the temperature

Using a coin, turn the arrow of the temperature control T to a setting between 1 and 7.

Setting 1 = highest temperature
Setting 7 = lowest temperature

Temperature Display

 The thermometer is located on the left of inner compartment

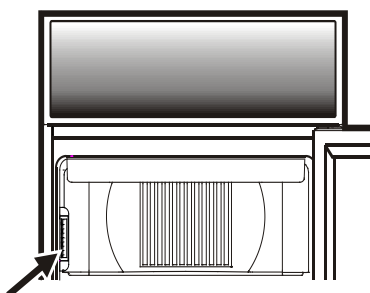


Cooling

This appliance can be used for chilling all types of drinks and food.

The grid shelves can be moved to accommodate different height bottles or packages.

High-percentage alcohols should be tightly sealed and stored upright.

 The ventilation slots on the inside must not be covered!

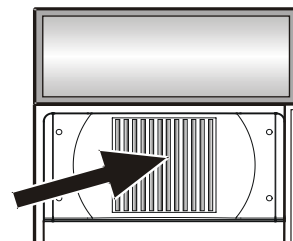

Lighting for BCD4302 and BCDv4312

 
The internal light consists of fluorescent tube and located on the inner cabinet right side in BCDv4312 while BCDv4302 internal light is located on the inner cabinet top side.

The lighting of the display on top of the unit is also illuminated by fluorescent tube.

Lighting for BCDv4313

The lighting for interior and display in this model is by LED.

- The interior light together with the display light can be turned on and off using the switch S.

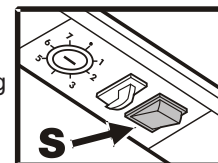

The lighting can only be replaced by Customer Service or by trained professionals! Do not try to change the lighting on your own.

Caution - class 1M laser radiation. When cover is removed, do not look directly at light through optical instruments.

 
Safety lock

The lock is equipped with a safety mechanism.

Locking the appliance:

- Insert the key as shown by arrow 1.
- Turn the key 90°.

To unlock the appliance, the same procedure must be repeated in the same order.

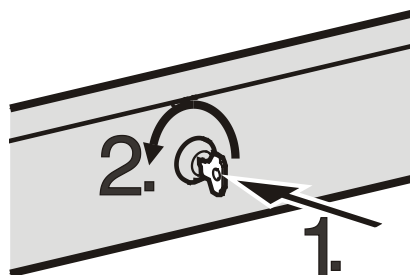

Defrosting

The refrigerator compartment defrosts automatically.

When operating at the coldest thermostat setting, the interior rear wall may, however, ice up. In this case, the appliance must be defrosted manually.

- Switch the appliance off to defrost.
Pull out the mains plug or set the temperature control to 0.
- Remove the food from the appliance and store in a cool place.
- Leave the door of the appliance open while defrosting. After defrosting mop up the remaining water and clean the appliance.

WARNING: Do not use any mechanical devices or other artificial aids for defrosting other than those recommended by the manufacturer.

Cleaning

Before cleaning always switch off the appliance. Pull out the mains plug or remove/unscrew the fuse.

Clean the inside, equipment parts and outer walls with lukewarm water and a little detergent. Do not use abrasive or acid cleaners or chemical solvents.

Do not use steam cleaners because of the risk of injury and damage.

 
- Ensure that no cleaning water penetrates into the electrical components or ventilation grille.
- The dust should be removed from the refrigeration unit and heat exchanger - metal grid at the back of the appliance - once a year.
- Clean the drain hole in the refrigerator compartment with a thin object, e.g. cotton swab or the like.
- Do not damage or remove the type plate on the inside of the appliance. It is very important for servicing purposes.

Malfunctions

You may be able to rectify the following faults by checking the possible causes yourself:

- **Appliance does not function:**
 - Is the appliance switched on?
 - Is the plug correctly fitted in the mains socket?
 - Is the socket fuse intact?
- **Loud running noise:**
 - Is the appliance set up firmly on the floor?
 - Does the appliance cause nearby items of furniture or objects to vibrate? Please note that noises caused by the refrigerant circuit cannot be avoided.
- **The temperature is not low enough:**
 - Is the temperature setting correct (see **Setting the temperature**)?
 - Have excessive amounts of fresh food been placed in the appliance?
 - Does the separately installed thermometer show the correct reading?
 - Is the ventilation system working properly?
 - Is the appliance set up too close to a heat source?

If none of the above causes apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the type of appliance ①, service number ② and appliance number ③ as indicated on the type plate. The type plate is located in the refrigerator compartment on the left-hand side.

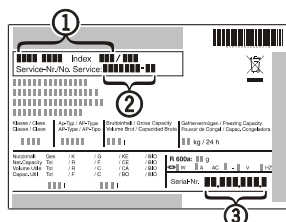

Shutting your appliance down

 
If your appliance is to be shut down for any length of time, switch it off and disconnect the plug or remove the fuse. Clean the appliance and leave the door open in order to prevent unpleasant smells.

The appliance complies with the relevant safety regulations and EC directives 2004/108/EC and 2006/95/EC.

Changing over door hinges

Door hinges should only be changed by a trained expert. Changing the door hinges must be done by two people.

1. To prevent the door from falling off, support the door at the bottom.

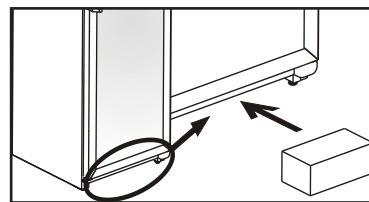


2. Remove cover ①.

Caution:


The door mounting has a spring mechanism enabling the door to close by itself. The hinge bracket turn to the left when the screws are undone. Hold the hinge bracket ③.

 - Remove screws of the hinge bracket ②.

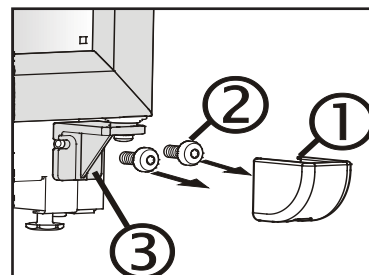


- 3.

 - Unscrew bottom hinge bracket ① by turning out the bottom screw ②.
- Pull the door out at the bottom and lift off.

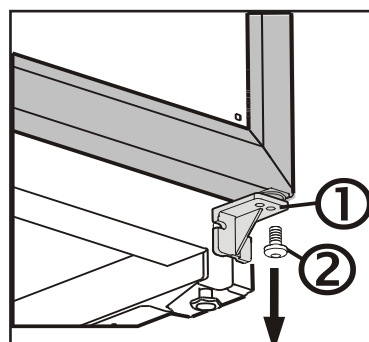


- 4.

 - Transfer cover ① and bushing ② at the top of the door to the opposite side.
- Transfer handle ③ and plugs ④ to the opposite side.

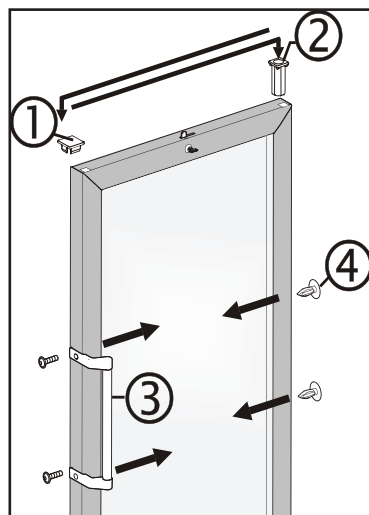


5.

 - Transfer spring mechanism ① and cover ② at the bottom of the door to the opposite side.

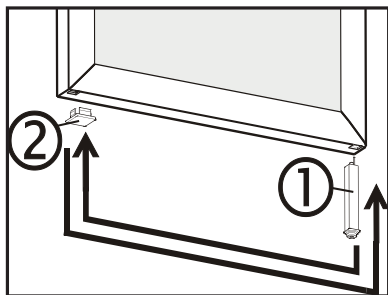

7.

 
- Transfer bottom cover to the opposite side

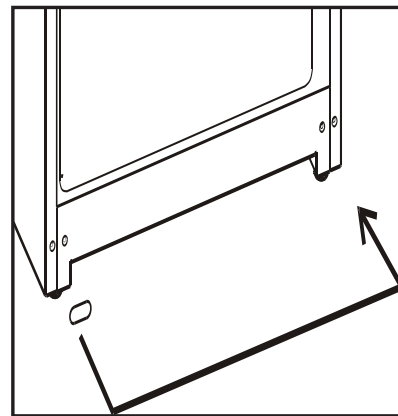

Caution :


When changing the spring mechanism to the opposite side, the spring must be changed as well. This is to ensure the self-closing mechanism working when the door is reversed.

 Please refer the step below for the changing of the spring.

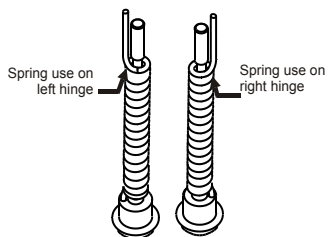

8.

 - Mount door on top hinge pin and close.
- Support the door at the bottom to hold and prevent from falling off.


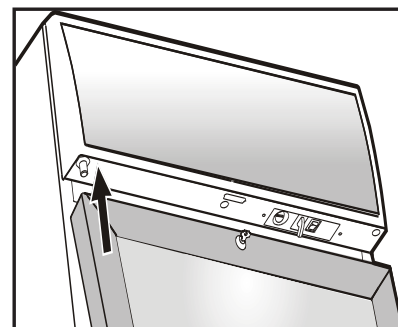


Changing the spring.

Caution :


Change the existing spring with "reversed spring". Reversed spring is supplied with the unit. It is located on the electrical compartment behind the display area.

  - Remove the screws at the top of the display ① and move upwards.
- Take the spring ② on the electrical compartment.
- Put the new spring ② on the hinge shaft ③
- Reserve the original spring at the same storage for future use.

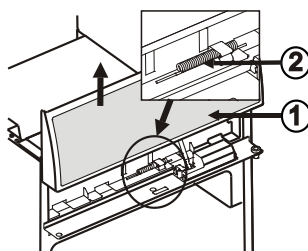


9.

 - Position hinge bracket as shown in the drawing and fasten with screw.

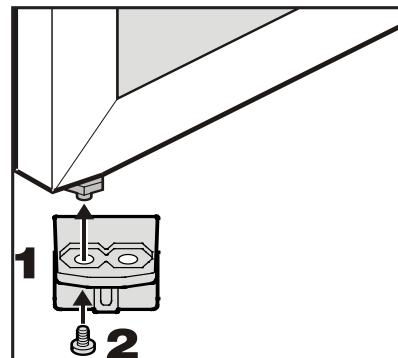

6.

 - Transfer the top hinge pin ② to the opposite side.
- Move display ① downwards and screw into place.

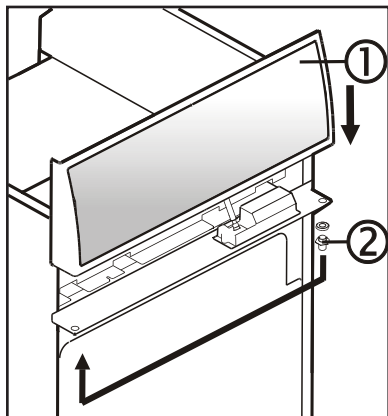

10.

- Turn hinge bracket 90° anticlockwise so the spring inside the mechanism is torsionally stressed. Fasten hinge bracket ① with screws ②.
- Reattach hinge cover ③.

